



IMPORTANT:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully. Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. Should you ever have any questions or feel you require help please contact your place of purchase for assistance.

Instructions of Safety and Warnings

- Make sure that the mounting surface is strong enough to handle mounted product and equipment.
- **DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**
- Always be sure to have someone assist you or a mechanical device to lift and position heavy products safely.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction or alterations of the given power unit and control box aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless the product is intended for their use and all instructions and manuals are fully reviewed and understood by them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).

Other Cautions



Don't clean the product with water while the power is still connected.



Don't disassemble or replace components while the power is still connected.



Never operate the system with a damaged cord or plug.



Never operate the system if it's in moist environment or its electrical components have contact with liquids.



If the control box makes unusual noise or smells, switch off the mains voltage immediately.



Disposal: The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Standby mode condition of electrical and electronic household equipment.

Mode: Standby mode **Power consumption (Watts):** ≤0.5W

After disabling the remote control function, the product automatically enter standby mode after 18 minutes of inactivity.


2.4GHz SRD (2437MHz) for Remote Control :Tx: 1.06 dBm (EIRP Power).

TOOQ

INSTALLATION MANUAL

JÖRMUN

FLOOR STAND WITH WHEELS AND ELECTRIC ADJUSTMENT 55" - 86"

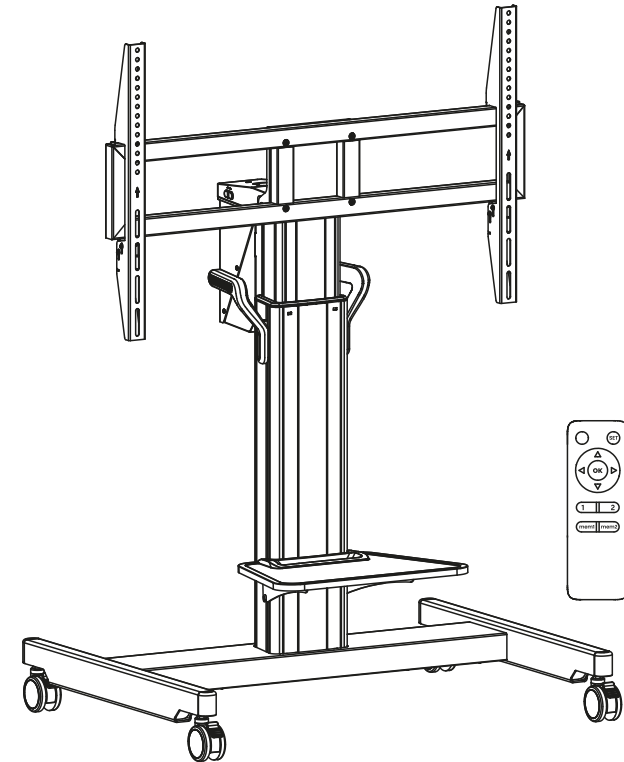


FSM04-B

VESA Compatible


300x100	300x200	400x200	300x300	300x400
400x300	600x200	500x300	400x400	600x300
500x400	400x600	600x400	700x400	800x400
700x500	600x600	800x500	800x600	900x600



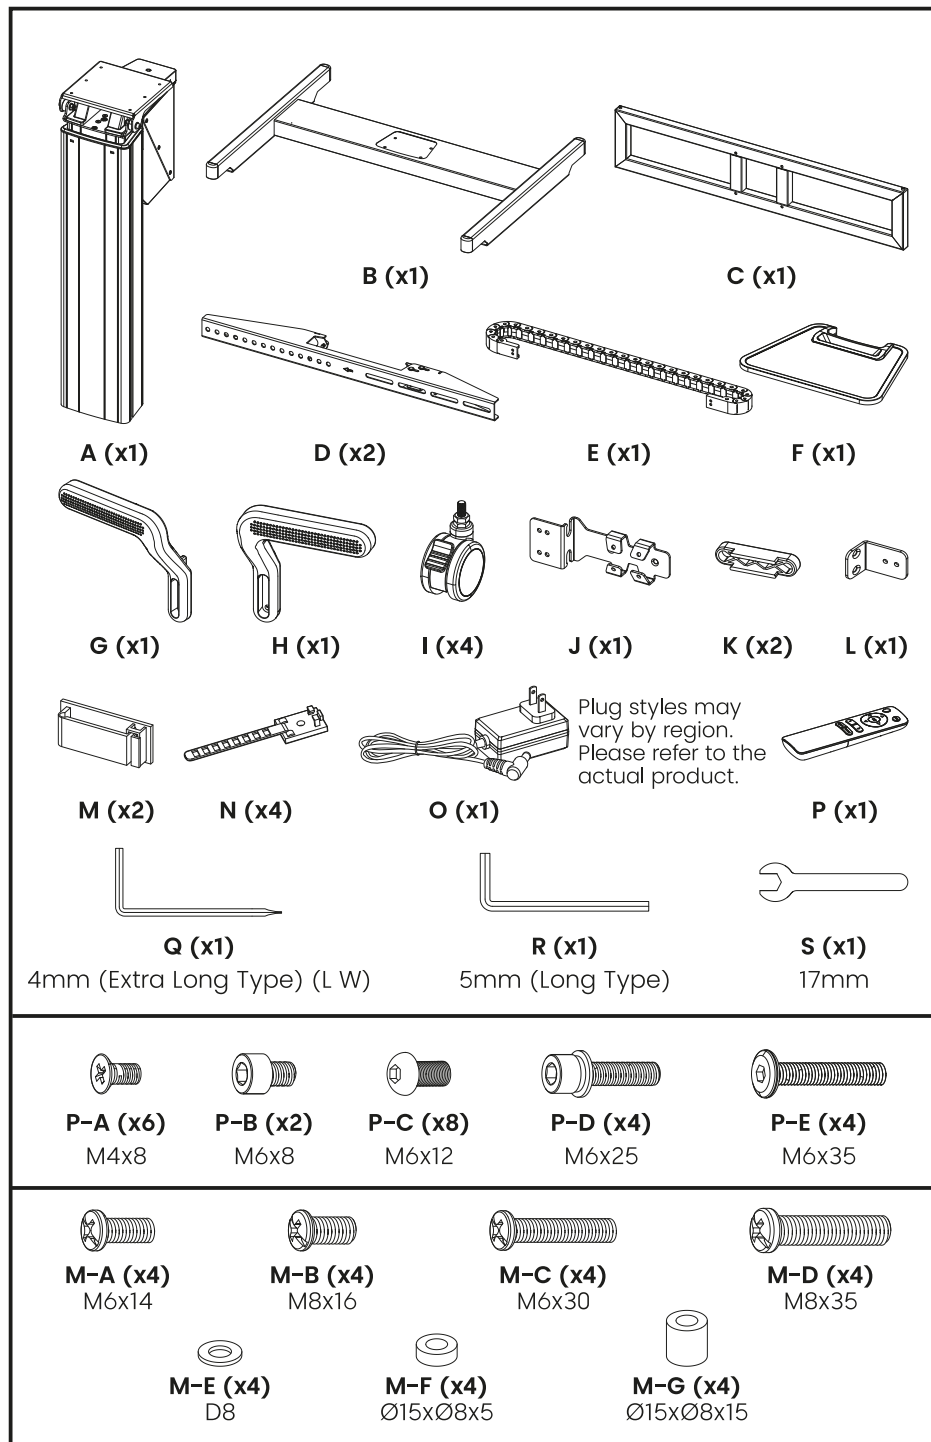


THIS PRODUCT REQUIRES MULTIPLE-PERSON INSTALLATION.

1

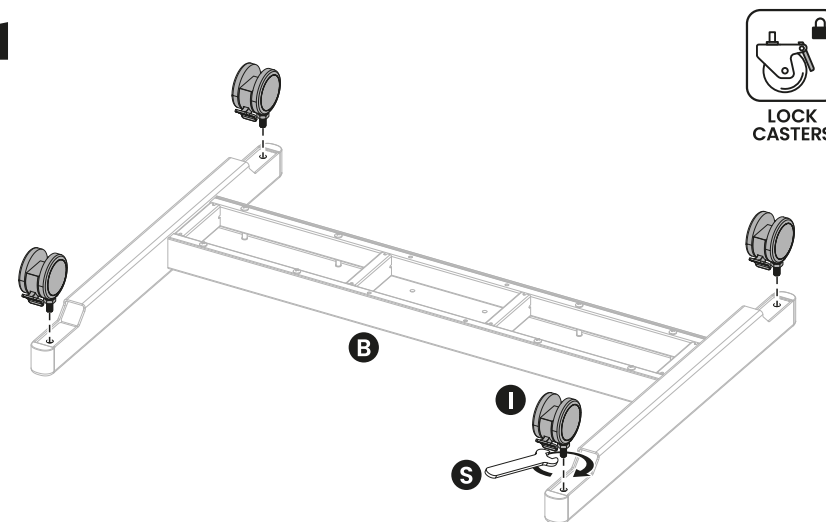

2


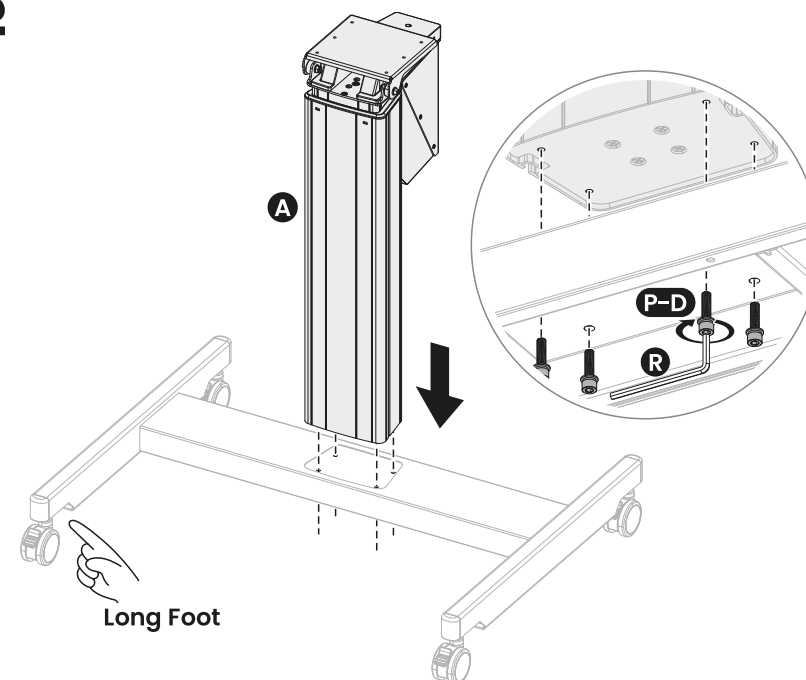


Cut out this page to easily identify and match the parts.






3


Power on the unit, press and hold the "⬆" button to lift the column.

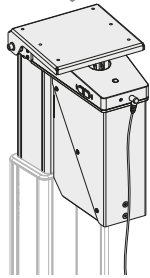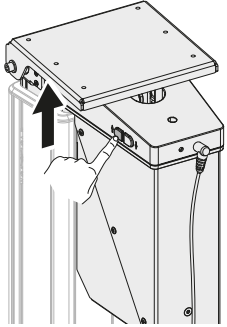

Press and hold the flip button to tilt the VESA plate to a vertical position.

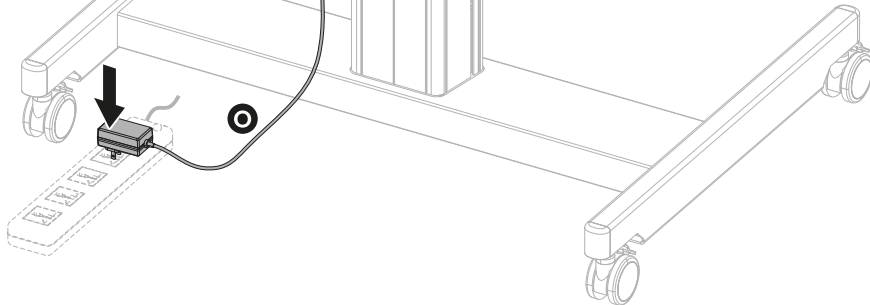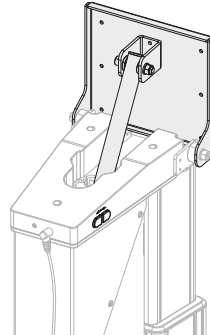
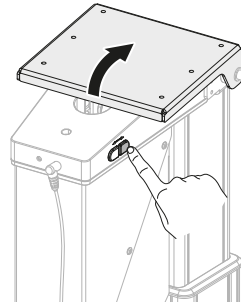


Note: If the caster can't touch the ground, loosen the lower nut as shown to adjust the caster to proper position, then tighten the upper nut.

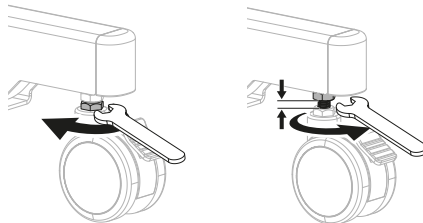


4

Adjust the lower sliders to the desired position before attaching shelf **F**.

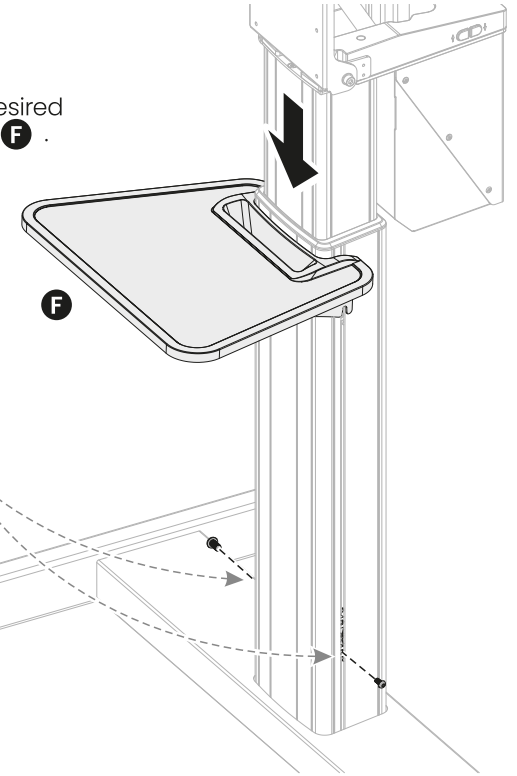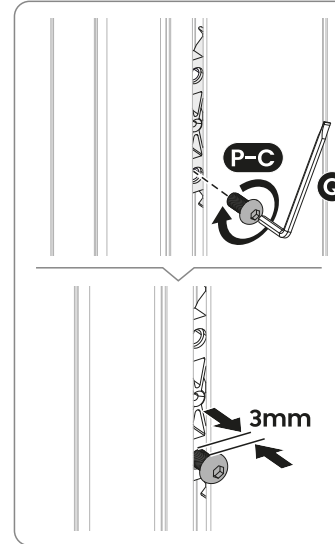


5


Adjust the shelf to the desired position and tighten the four screws to secure it.

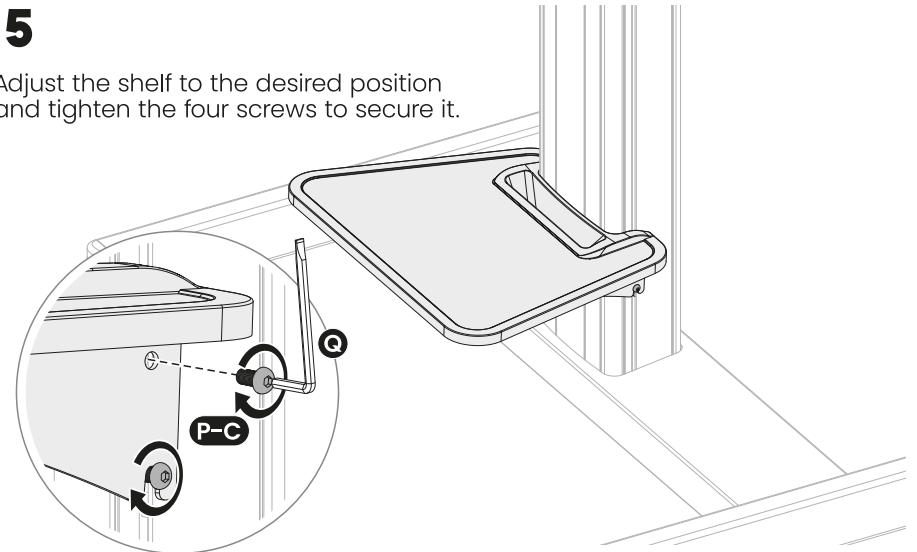

6

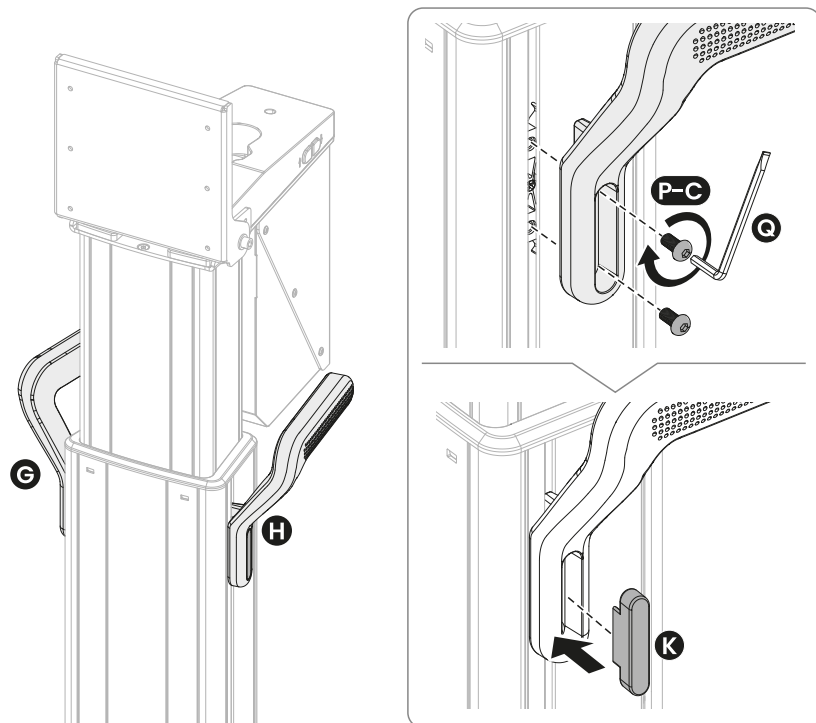


8

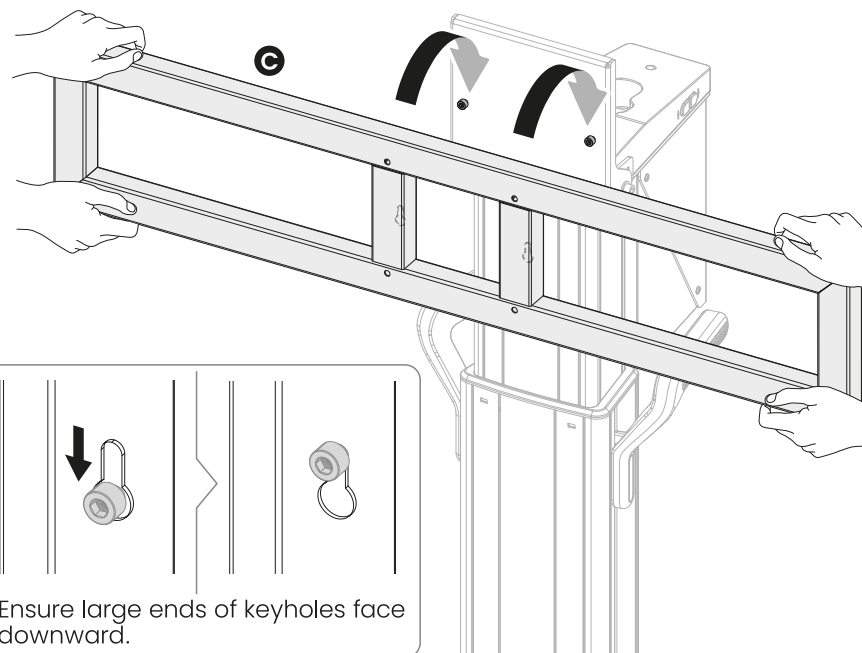


7


Do not fully tighten them, leaving a 3mm distance for the following steps.

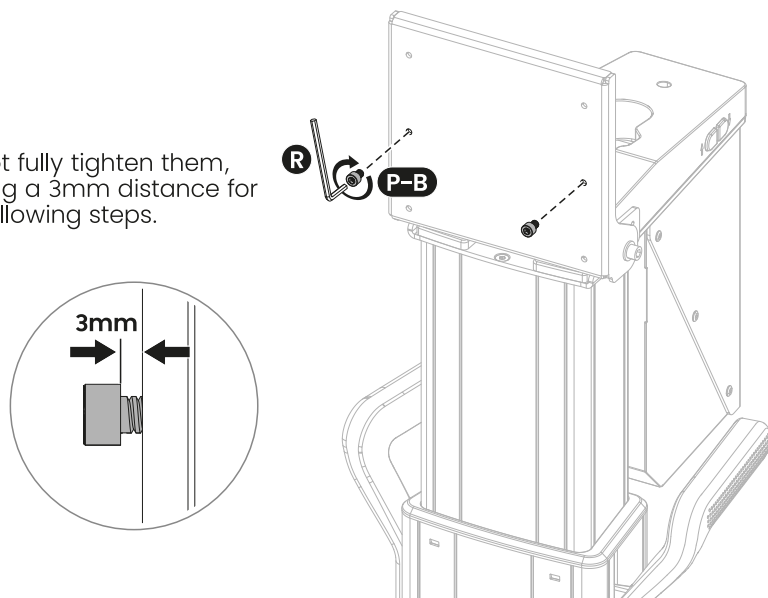

9

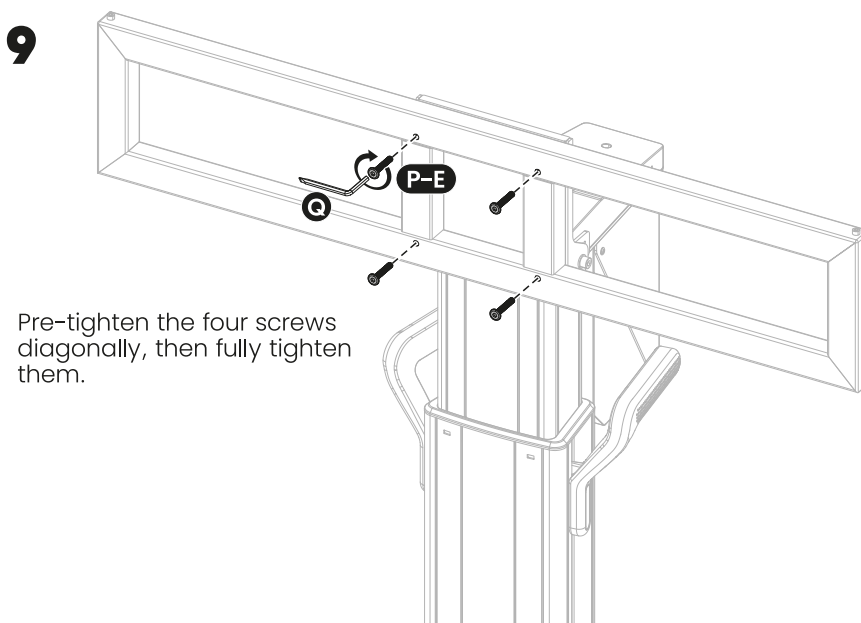

10

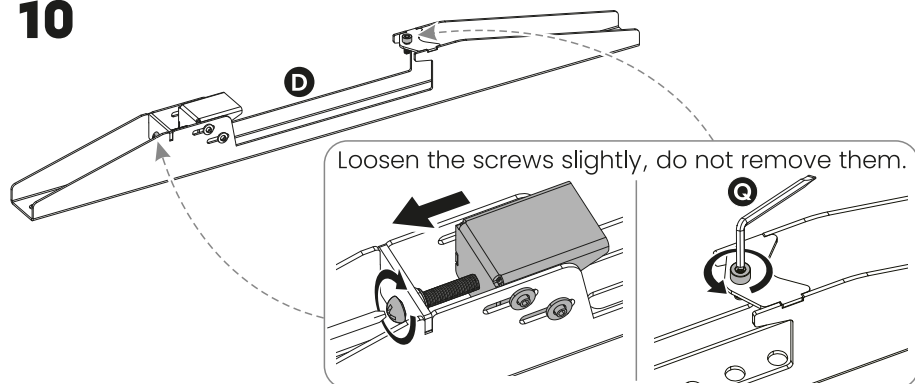

11 CAUTION


To ensure a safe installation, select the proper screw before starting:

- Use screws specified by the TV manual or manufacturer.
- Check length: **TOO LONG** damages the TV; **TOO SHORT** causes falls.




Note: Use a hand screwdriver to prevent damage; power tools are not recommended.

DO NOT OVERTIGHTEN the screws.


Note: Ensure that both mounting arms are horizontally aligned and centered on the back of the TV.

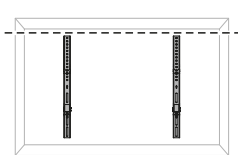


Note: Use spacers if the back of your TV is curved, recessed, uneven, or if the bracket plate does not sit flush against the TV.

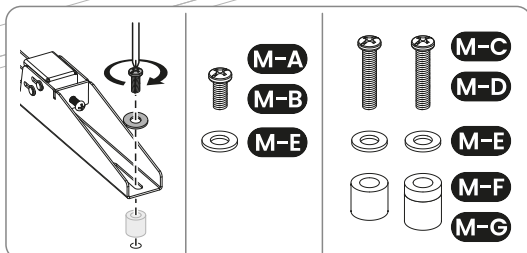
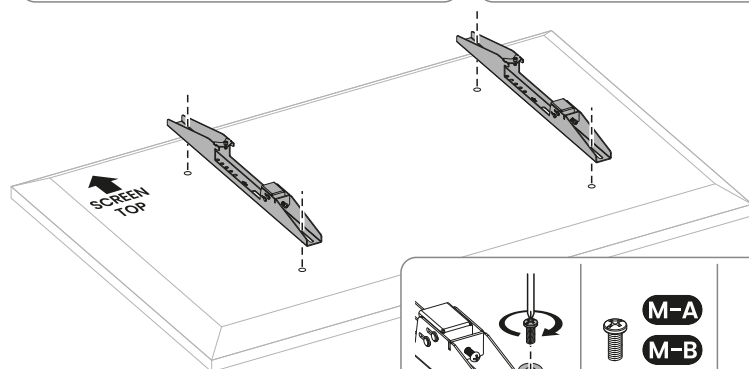
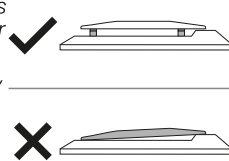



12

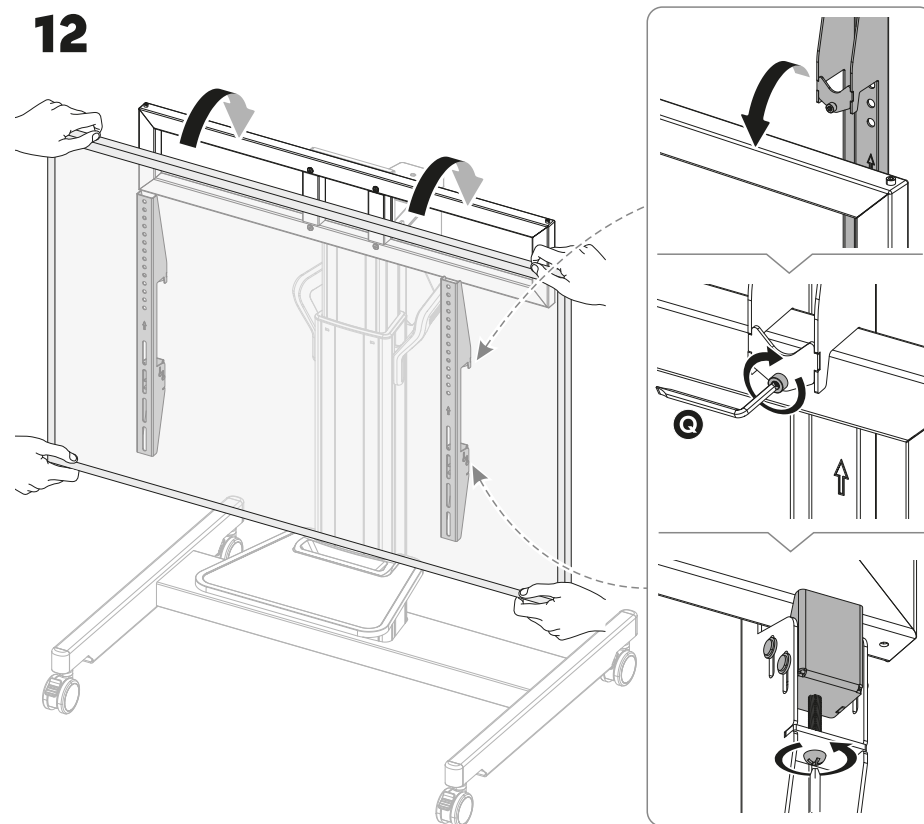

13

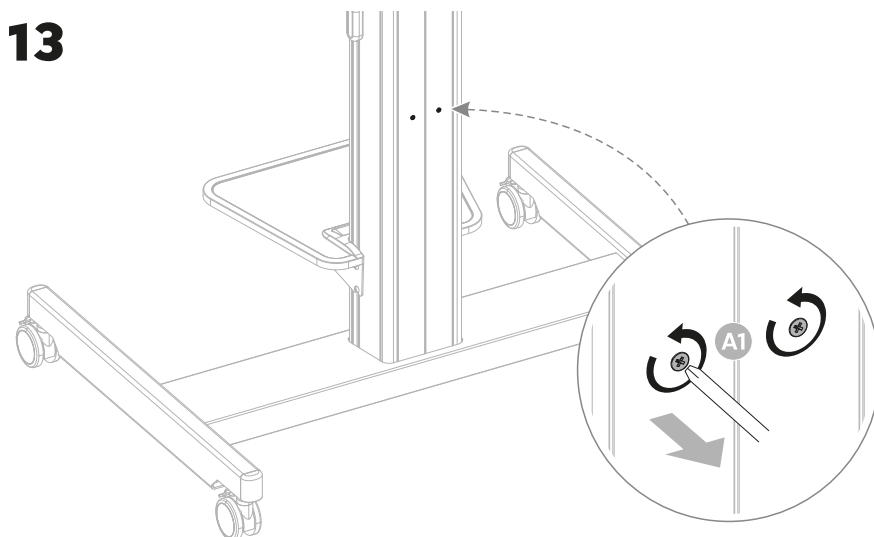

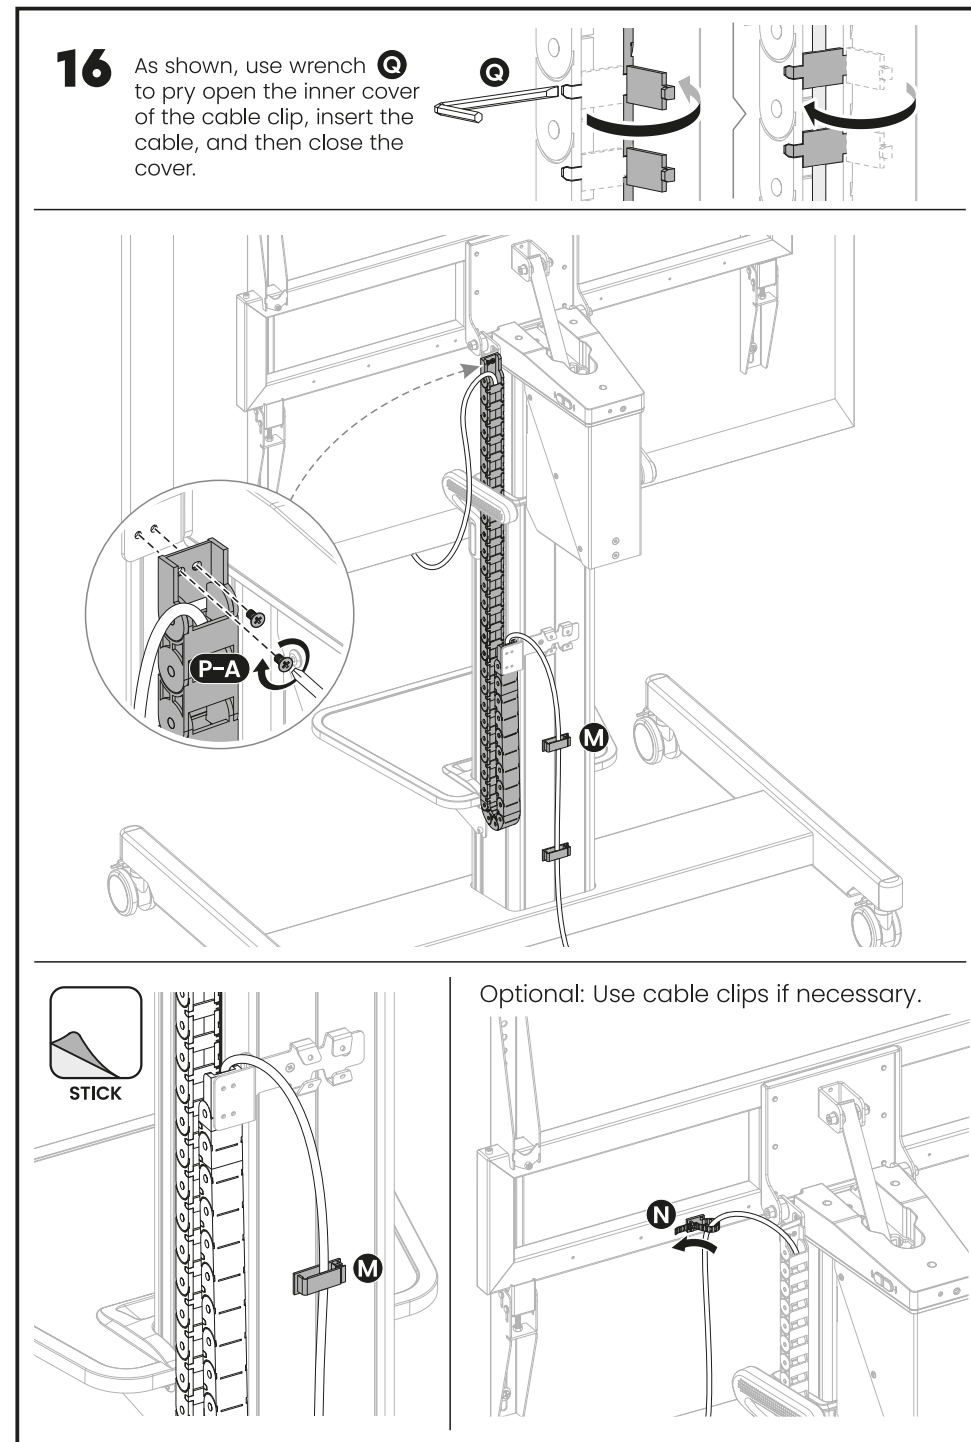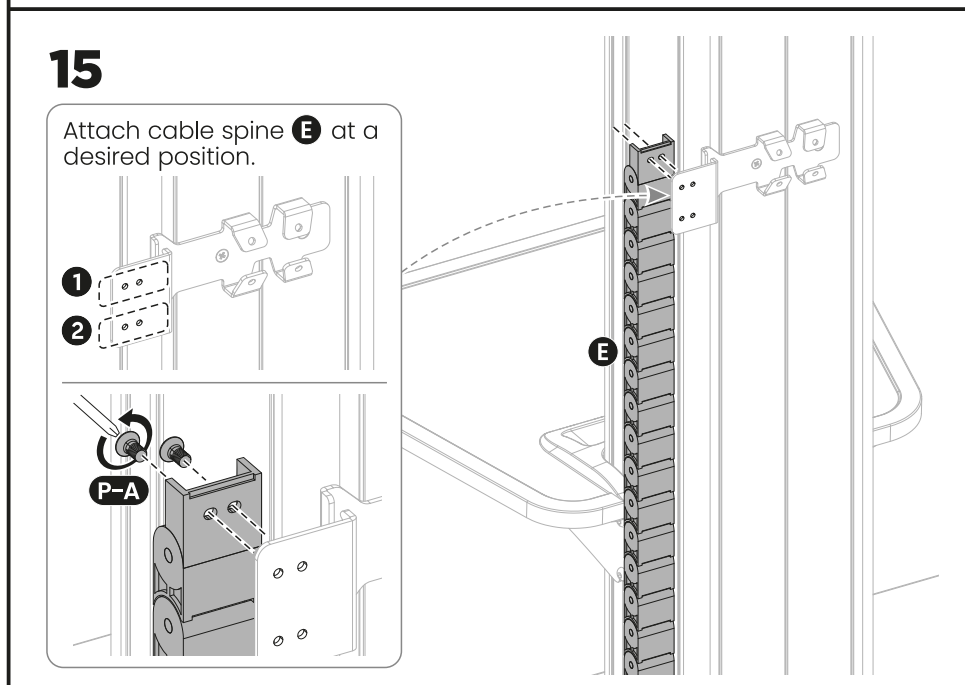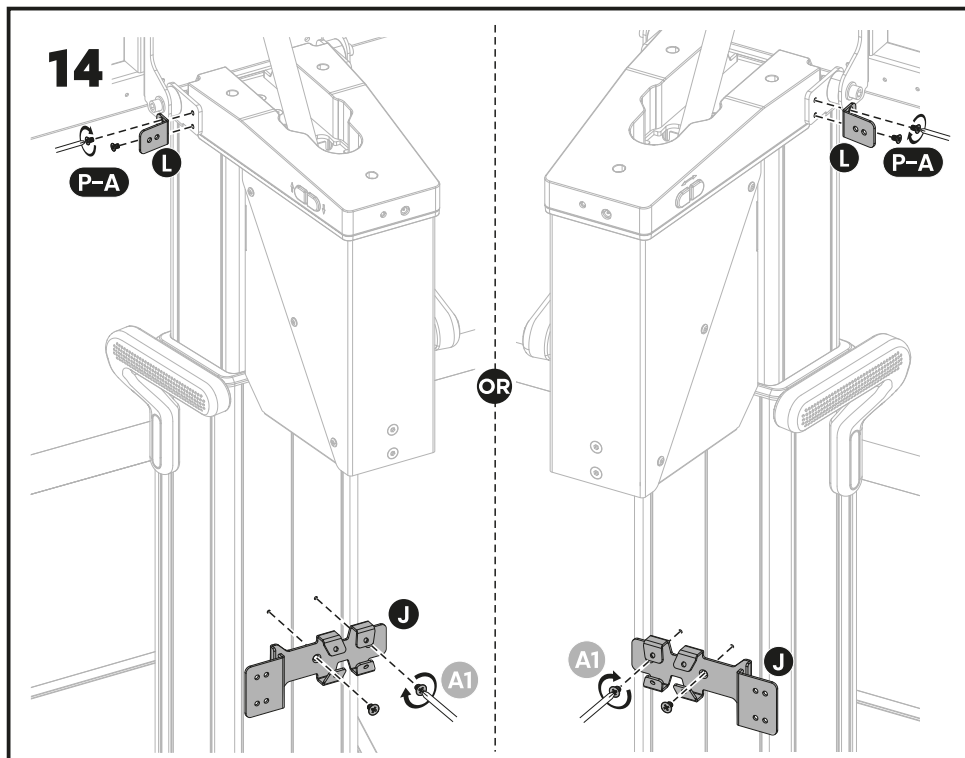

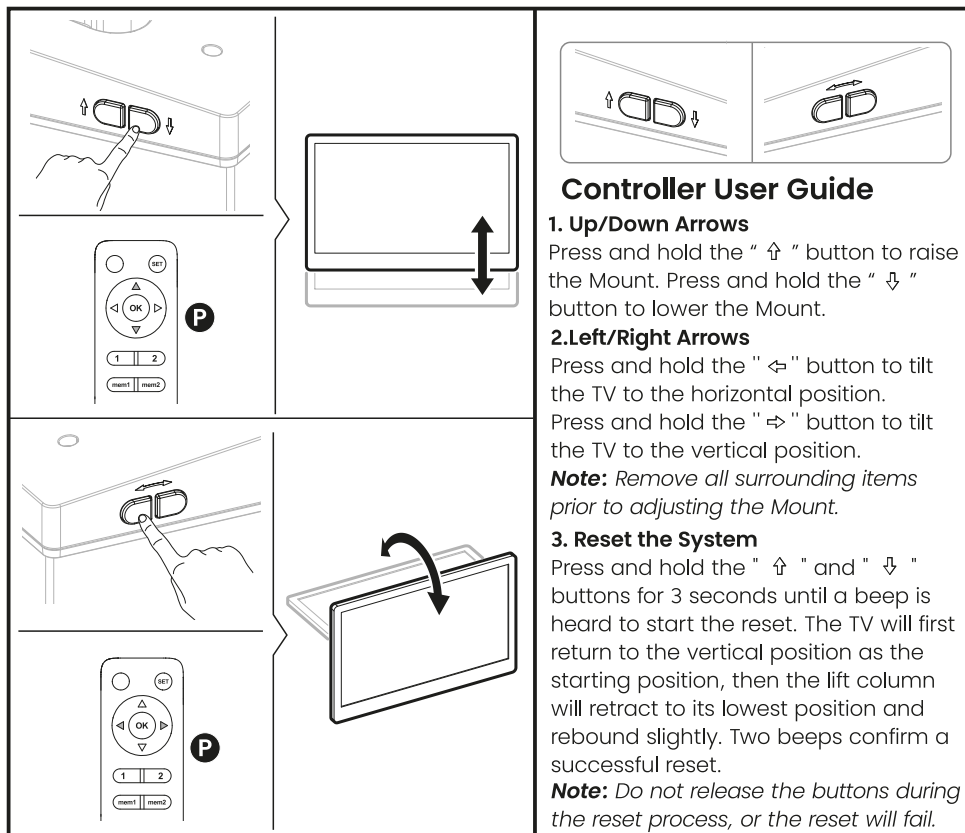

Controller User Guide

1. Up/Down Arrows

Press and hold the "↑" button to raise the Mount. Press and hold the "↓" button to lower the Mount.

2. Left/Right Arrows

Press and hold the "←" button to tilt the TV to the horizontal position. Press and hold the "→" button to tilt the TV to the vertical position.

Note: Remove all surrounding items prior to adjusting the Mount.

3. Reset the System

Press and hold the "↑" and "↓" buttons for 3 seconds until a beep is heard to start the reset. The TV will first return to the vertical position as the starting position, then the lift column will retract to its lowest position and rebound slightly. Two beeps confirm a successful reset.

Note: Do not release the buttons during the reset process, or the reset will fail.

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

⚠ Warnings

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.

⚠ Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.

- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.


Note: Insert 2 AAA batteries (not included) into the remote prior to adjust the TV Stand.

Adjust the height by pressing the "△" or "▽" button on the remote control. If the TV stand fails to lift or lower with no audio feedback when adjusting the height or replacing the remote control, follow the instructions below to complete the remote control pairing.

Pairing the Remote to the Mount & Resetting the System

STEP 1: If it is the first time you turn on the mount, you should pair the remote to the mount first then reset the system. See the STEP 2 below.

STEP 2: Press the small button on the control box with a paper clip or pencil as shown. After you hearing a beep, press the "SET" button on the remote control, then you hear consecutive beeps for around 10 seconds indicating the pairing is ongoing. After that, the beeps stop, indicating the pairing is complete. Then refer to Step 3 in the Controller User Guide or Step 6 in the Remote Control User Guide to reset.

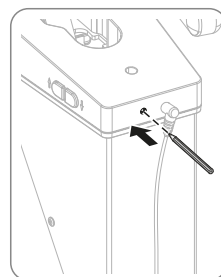

Remote Control User Guide

1. UP/DOWN ARROWS

Press and hold the "△" button to raise the Mount. Press and hold the "▽" button to lower the Mount.

 
Note: Remove all surrounding items prior to adjusting the Mount.

2. LEFT/RIGHT ARROWS

Press and hold the "◀" button to tilt the TV to the horizontal position. Press and hold the "▶" button to tilt the TV to the vertical position.

3. Memory Setting

Press and hold the "mem1" or "mem2" button for 3 seconds until you hear a beep, indicating that the current position has been saved to memory. The "mem1" or "mem2" buttons can each store a position.



4. Activate Height Settings

Press the "1" or "2" button and the mount will automatically get to the position saved in the corresponding button "mem1" or "mem2".

5. Default Setting

Short press the "OK" button and the mount will automatically retract to the lowest position. To stop it, press the "OK" button again.

6. Reset Mode

Press and hold the "OK" button for 3 seconds until you hear a beep, and the mount will first return to the vertical position as the starting position, then the lift column will retract to its lowest position and rebound slightly. Two beeps confirm a successful reset.

7. To Unpair a Remote Control

Press the small button on the control box with a paper clip or pencil as how you pairing the remote control. After hearing a beep, hold and press the button for 5 seconds until you hear a beep again, which indicates the unpairing is completed.

8. Disable/Enable the Remote Control Function

To disable the remote control function, press the pairing button on the control box five times. The control box will emit one beep after each press. On the fifth press, the control box will emit two beeps, indicating successful disabling.

To re-enable the remote, press the pairing button once or reconnect the power to the mount. One beep confirms successful re-enabling.

Troubleshooting Guide

1. Can't operate

There are 9 possibilities:

- If the unit beeps once after pressing the up, down, or memory buttons, check if the mount has reached its limit (maximum/minimum height or designated position), or if it has encountered an obstruction or triggered overcurrent protection.
- Two beeps mean the reset failed, follow the reset instructions to complete the operation.
- The system of Mount may be error. Check if the unit beeps three times after pressing a button. If so, please reset the mount or turn off the power, check the wiring, and then restart the system.
- The system may be overheating. Check if the unit beeps four times after pressing a button. If so, allow the unit to cool down (about 18-30 minutes).
- If the up or down movement stops suddenly and the unit beeps five times, this indicates a power problem.
- The AC/DC end of the power cord may be unplugged/disconnect from the outlet/mount. Check the connection to ensure the unit is powered.
- The operating distance may be too far and not in range of the mount. Using the remote control within 30 feet (10m) from the Mount.
- The batteries in the remote control may be low or dead. Replace the batteries.
- The remote control may be broken. Check to see if the indicator LED found on the remote lights when a button is pressed. If not, contact your place of purchase for a replacement.

2. The TV mount is making an abnormal noise or sound.

- Check all power connections and reset the system. If the unit continues to make an abnormal noise, please contact your place of purchase for a replacement.

